



## Introduction

A J Unlatching Tool is used for running and unlatching J Unlatching Heads. Attach the J Unlatching Tool the tool string and install equipment to be ran with a J Unlatching Head, lower into the wellbore to desired depth. Set down gently on top of a pre run no-go, the tool string weight will actuate the J Unlatching Tool and J off of the J UnlatchingHead. Remove the tool string from the wellbore.

## Structure characteristics

The J Unlatching Tool consists of Top Sub、 Body、 Spring Holding Head and Pin。 There are “J” grooves and straight grooves on the Body。

## General Technical Parameters

Size	O.D	Fishing neck	Connection	PN.
1.25 "	1.25 "	1.187 "	15/16-10UN	W74-01.01.00
1.5 "	1.5 "	1.375 "	15/16-10UN	W74-01.03.00
1.75 "	1.75 "	1.375 "	15/16-10UN	W74-01.04.00
2.5 "	2.5 "	2.313 "	1-1/16-10UN	W74-01.05.00

Note: More customized parts are available upon request.

